

Backwalls
Hop-up Impact Curved

1



Remove frame and graphic from wheeled carry bag.

2




Printed graphic is already attached to the collapsed frame.

3



Open the frame outwards.

4

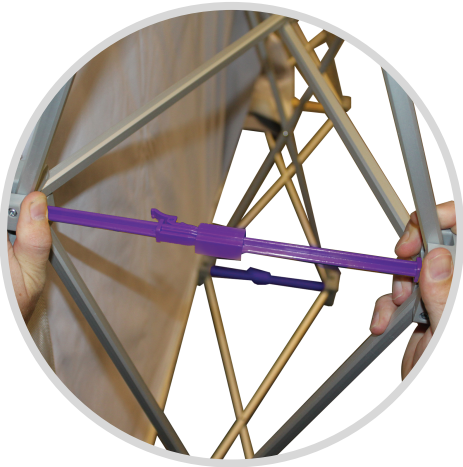

Connect the purple, plastic locking arms to secure the frame's upright position.

5



Wrap the graphic ends around the frame, connecting the velcro strip and tabs together.

6

